ATTENTION!

Prior to using the STRIKE you must fully read and comply with all instructions and warnings of the product in the Instructions Manual. The STRIKE is intended for retaining firearms, and failure to fully read and comply with all instructions and warnings of this product could result in a firearm falling into the hands of someone other than the owner-such as a child or unwanted quest.

Failure to comply with the instructions and warnings of the STRIKE instructions manual could ultimately result in severe bodily injury or death. Do not use the STRIKE until you have fully read all instructions and warnings contained in the instructions manual and any other manuals or documentation that accompany the product.

Kwick Strike INC shall not be liable for any injury, loss, or damage, direct or consequential arising out of the use of, or the inability to use the STRIKE. You shall determine the suitability of the STRIKE before intended use and you assume all risk and liability whatsoever in connection therewith.

FAILURE TO COMPLY WITH THE STRIKE INSTRUCTIONS MANUAL OR ANY OTHER MANUALS OR DOCUMENTATION THAT ACCOMPY THIS PRODUCT WILL RESULT IN THE LIMINTED WARRANTY CONTAINED **HEARIN TO BECOME VOID.** ADDITIONALLY, THE LIMITED WARRANTY CONTAINED HEARIN WILL BECOME VOID IF YOU 1) SUBJECT THE STRIKE TO ANYTHING BEYOND ORDINARY AND INTENDED USE. 2) MODIFY, ALTER, OR DECONSTRUCT THE STRIKE, OR 3) USE THE STRIKE IN **VIOLATION OF ANY APPLICABLE** LOCAL, STATE OR FEDERAL RULES, LAWS, OR REGULATIONS.







FIREARM FIT GUIDE The Strike accommodates semi-auto handguns ranging from sub-compact, compact and some full size. Some common examples are S&W M&P9 Shield, Glock 19, Rugar Security 9, and Colt 1911.

CARE AND MAINTENANCE

BASIC CLEANING

The strike was designed for very little to no maintenance required. To make sure your strike functions properly:

- Every 6 months to a year, add a small amount of oil or WD-40 around the actuator. Careful not to use too much to prevent build up.
- · Check and tighten bolts as needed throughout the life span of the strike.

RUST PREVENTION

Kwick Strike offers a Limited Lifetime Warranty, however exposure to outside elements may cause rust on the steel actuator. The strike is NOT designed to be waterproof. Prolonged exposure to water, mud or condensation could create rust on the actuator. If water gets on the strike, open the strike, and let dry thoroughly before continued use.



HOW TO INSTALL THE STRIKE

- 1. Loop the provided security cable around the vehicle seat rail or another secure structure.
- 2. Using a padlock (NOT PROVIDED) secure the cable to the bottom of the unit.
- 3. Slide the strike between the seat and console at desired depth.

ITEMS INCLUDED

- Security cable
- · 2 Keys



HOW TO USE THE STRIKE

- 1. Unlock door.
- 2. Tap on knob (This may require some force)
- 3. Once strike is deployed place gun in the cups
- 4. Pull knob away from unit to disengage.
- 5. Push the top of the actuator down until the unit clicks back into place.

IMPORTANT NOTICE: DO NOT DRY FIRE THE UNIT, THIS MAY RESULT IN INJURY!!!! FOR FULL WARNING PLEASE GO TO KWICKSTRIKE.COM